



SUPPLIED MATERIALS

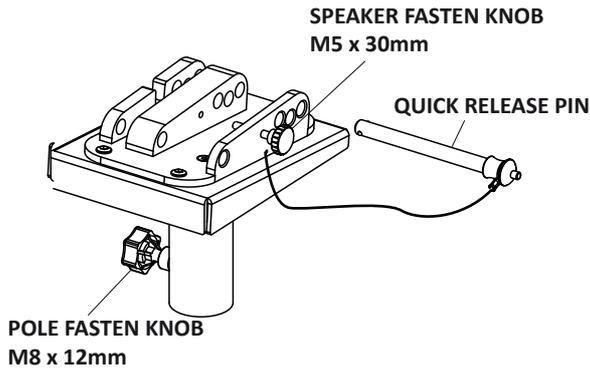


OPTIONAL MATERIALS


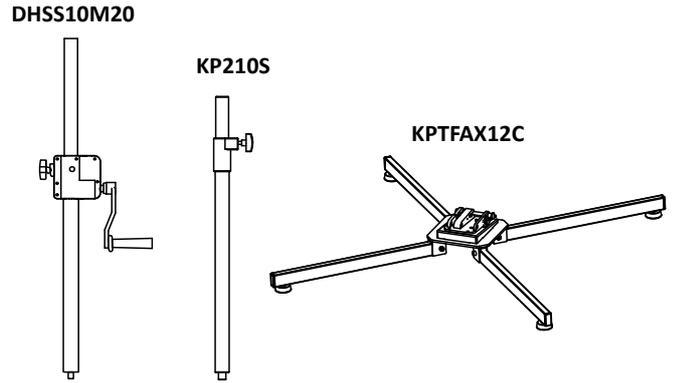


ASSEMBLY LAYOUT

- REMOVE THE SPEAKER BRACKET FROM THE FLOOR STAND.
- INSERT AND SCREW IN THE POLE IN THE M20 THREADED HOLE.

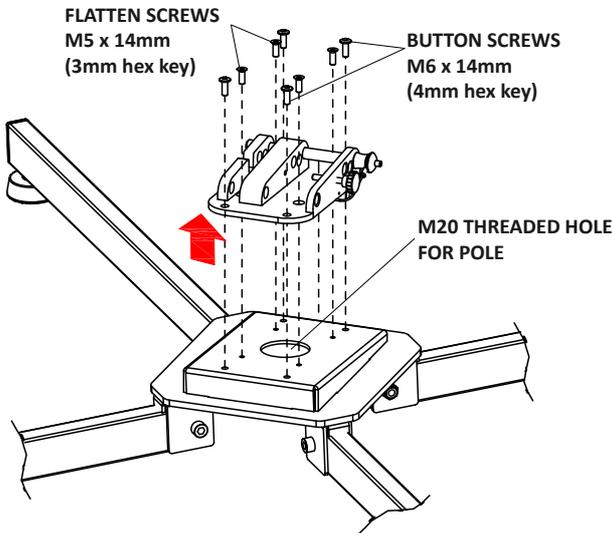

- LOOSEN BOTH THE SPEAKER FASTEN KNOBS (A)
- PLACE THE SPEAKER AND FASTEN IT TO THE POLE ADAPTER USING THE QUICK RELEASE PINS (B)
- TIGHTEN THE TWO SPEAKER FASTEN KNOBS (A)

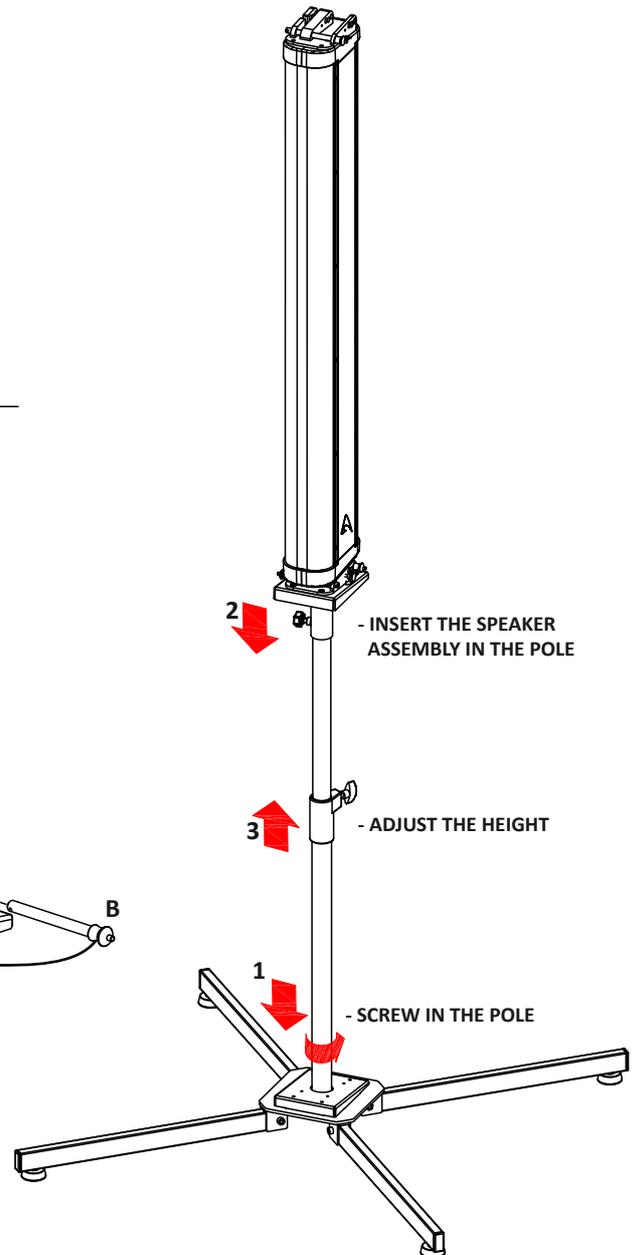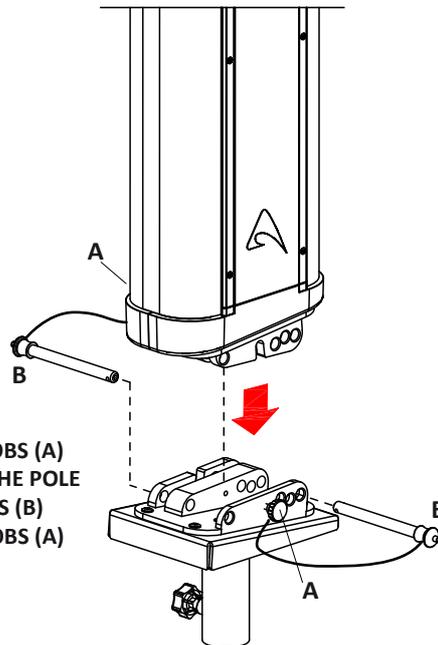

CONDITIONS OF USE

Proel does not accept any liability for damage caused to third parties due to improper installation, use of non-original spare parts, lack of maintenance, tampering or improper use of this product, including disregard of acceptable and applicable safety standards. Proel strongly recommends that this loudspeaker cabinet be suspended taking into consideration all current local regulations. The product must be installed by qualified personal. Please contact the manufacturer for further information.

WARNINGS

- USE ONLY SPECIFIED ACCESSORIES: KPTFAX12C AS FLOOR STAND AND DHSS10M20 OR KP210S AS POLE.
- A maximum of 1 x AX12C cabinet is allowed to be installed on the KPTPOLEAX12C pole.
- The ground where the KPTFAX12C floor stand is placed needs to be absolutely stable and compact.
- Adjust the feet so to put the KPTFAX12C perfectly horizontal to ground. Use a spirit level to obtain the best result.